

Compatibility List

LG[®]

KC550, KC780, KC910, KE500, KE770, KE800 Chocolate Platinum, KE850 Prada, KG KE970 Shine, KF300, KF510, KF600 Venus, KF700, KF750 Secret, KF900, KG90, KG220, KG270, KG275, KG320, KG320s, KG328, KG375, KG800 Chocolate, KG810, KG890, KG920, KP130, KP235, KP500 Cookie, KS360, KT520, KU800, KU950, KU990 Viewty, L600V, U830, U310, Orsay, Venus

Samsung[®] (G600 style)

B100, B880, D880, D888, E210, F110, F200, F210, F330, F480 Tocco, F490†, F490v, F700, F700v, G600, G800, G808, i450, i640v, i780, i900 Omnia, J700, J700v, L600, L760, L768, L780, L810v, M110 Solid, M150, M200, M210, M310, M3200 Beat, M600, M8800 Pixon, P260, P520 Armani, QBowl, S7330, Steel, U800, U900 Soul

Samsung[®] (D800 style)

Blackjack, Blush, D510, D520, D800, D807, D820, D828, D830, D840, D900, D900i, E250, E390, E570, E570v, E590, E780, E840, E870, E900, E910 Seren, F300, i600, J600, M300, P300, P310, P300, P310, T519, T629, T809, U100, U300, U420, U600, U70, U700, X820, X830, ZV40, Z150, Z400, Z510, Z520, Z540, Z560, Z720, Z720v

Sony Ericsson[®]

C702, C902, C905, D750i, F305, G502, G700, G900, J100i, J110i, J120i, J220i, J230i, K200i, K220i, K310i, K320i, K330, K510i, K530i, K550i, K550im, K610i, K610im, K618i, K630i, K660i, K750i, K750, K770i, K800i, K810i, K850i, M600i, P1i, P990i, R300, R306, S302, S500i, T250i, T303, T650i, V630i, V640i, W200, W280i, W300i, W302, W350i, W380i, W550i, W580i, W595, W610i, W660i, W700i, W710i, W760i, W800i, W810i, W850i, W880i, W890i, W900i, W902, W910i, W950i, W960i, W980, Z250i, Z310i, Z320i, Z520i, Z530i, Z550i, Z555i, Z610i, Z710i, Z750i, Z770i, Z780i

Nokia[®] (Small round tip)

1200, 1208, 1650, 1680 Classic, 2600 Classic, 2630, 2660, 2680 Slide, 2760, 3109 Classic, 3110 Classic, 3110 Evolve, 3120 Classic, 3250, 3500 Classic (old type), 3600 Slide, 5000, 5070, 5200, 5220, 5300 XpressMusic, 5310 XpressMusic, 5320, 5610, 5500 Sport, 5700 XpressMusic, 5800 Music, 6070, 6080, 6085, 6086, 6101, 6102, 6103, 6104, 6102i, 6110 Navigator, 6111, 6112, 6120 Classic, 6120c, 6121 Classic, 6124 Classic, 6125, 6131, 6131 NFC, 6133, 6133b, 6136, 6151, 6170, 6210 Navigator, 6212 Classic, 6220 Classic, 6280 Navigator, 6233, 6234, 6267, 6270, 6280, 6288, 6290, 6300, 6300i, 6301, 6500 slide, 6555, 6600 F old, 6600 Slide, 6650 Flip, 7070 Prism, 7210 Supernova, 7310 Supernova, 7360, 7370, 7373, 7390, 7500 Prism, 7510 Supernova, 7610 Supernova, E50, E51, E61, E61i, E65, E66, E71, E90, N70, N71, N72n N73, N76, N77, N78, N80, N81, N81, 8GB, N810, N82, N90, N91, N91 8GB, N92, N93, N93i, N95, N95 8GB, N96

Nokia[®] (Large round tip)

1110, 1100, 1101, 1112, 1600, 2100, 2275, 2300, 2310, 2600, 2610, 2650, 2652, 3100, 3108, 3120, 3200, 3210, 3220, 3230, 3300, 3310, 3330, 3410, 3510, 3510i, 3570, 3650, 3660, 5100, 5110, 5130, 5140, 5140i, 5210, 5510, 6020, 6021, 6030, 6060, 6100, 6110, 6150, 6170, 6210, 6220, 6230, 6230i, 6260, 6310, 6310i, 6510, 6600, 6610, 6610i, 6630, 6650, 6670, 6680, 6681, 6800, 6810, 6820, 6822, 6822a, 7110, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7380, 7600, 7610, 7650, 7700, 7710, 8210, 8310, 8800, 8850, 8890, 8910, 8910i, 9210, 9210i, 9300, 9300i, 9500, N-Gage, E70, E60, QD PT-6, ACP-7X

Mini USB

Blackberry 5820, 6210, 6230, 6280, 6220, 6510, 6710, 6720, 7100g, 7100i, 7100r, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v, 7210, 7230, 7280, 7250, 7270, 7290, 7510, 7520, 7730, 7750, 7780, 8700, 8700c, 8700g, 8700r, 8700f, 8700v, 8707v, 8703e, 8800, 8830, Curve 8300, Pearl 8100
I-mate JasJam, KJAM, T-Mobile, MDA Varo
NexTEL ic402, ic502, ic902
O2 XDA Exec, XDA Graphite, XDA IQ, XDA mini s, XDA Stealth, XDA Trion, XDA Zink
New Tom Toms, New Sony PSP and most devices that charge via Mini USB

iPod[®]/iPhone[®]

iPod[®] nano (1Gb, 2Gb, 4Gb), iPod[®] (10Gb, 20Gb, 30Gb, 60Gb), iPod[®] Video (30Gb, 60Gb, 80Gb), iPod[®] Classic (80Gb, 120Gb), iPhone[®], iTouch[®], iPhone3G[®]

Female USB

Most devices that can be charged via USB

Sony PSP[®]

Portable radios, E-books, PSP and Old TomToms, new PSP and TomToms can be charged on mini USB

Nintendo[®]

DS lite

