



mbeat[®] Turntable with USB/SD Digital Recording

USB-TR09 USER QUICK GUIDE

READ THIS INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE. MBEAT KEEPS IMPROVING THE PRODUCT BETTER, PRODUCT DESIGN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE. ALL RIGHTS RESERVED

USE

BEFORE


Read this before operation

- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- The ventilation holes should not be covered. Make sure there is enough space above and beside the amplifier/receiver (about 4 hours). Do not place a CD player or other equipment on top of the Turntable Player/Recorder/
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object gets into the set. Contact you dealer.
- When removing the power plug, never yank the cord.
- Do not attempt to clean the unit with the chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.




CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DANGEROUS VOLTAGE

 Conducts dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons present within this product's enclosure.

ATTENTION

 The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.


Note :

This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.

mbeat[®] Turntable with USB/SD Digital Recording

Installation and Operation

CAUTION: To avoid stylus damage, make certain the included stylus guard is in place whenever the turntable is being installed, moved or cleaned.

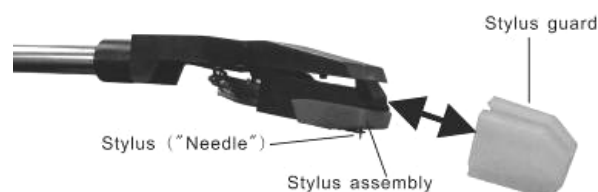

Main features:

1. 3-speed turntable fit for 33 1/3, 45, 78 RPM
2. Belt-drive and semi-automatic play tone arm
4. Ceramic stereo cartridge with jewel stylus
5. Included 45 rpm adapter
6. Slot-in USB/SD/MMC for encoding & decoding
7. Aux in (audio line in) socket
8. Stereo speakers
9. Removable semi transparent plastic dust cover
10. Support USB flash disk (MAX 16GB) or SD card (MAX 4GB)

LOCATION OF CONTROLS





- REC Record vinyl music into USB or SD card
- USB/SD Switch media source between USB disk and SD card
- ▶|| Play or pause music from USB disk/SD card
- Stop music from USB disk/SD card
- DELETE Delete recorded music or current played music from USB disk/SD card
- FOLDER+ When recording, Press this key to record music track into next folder, or when playing, jump into the next available folder music
- ◀◀ When playing, go back to the previous music track
- ▶▶ When playing, jump to the next music track

CAUTION:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.


CONNECTION

1. Connect the power cord to AC outlet
2. Switch the function switch from Power off to PHONO or USB/SD function. Now your system is ready to play the music from vinyl or USB/SD card.

PHONO OPERATION



1. Press the 4 stages function switch to **PHONO** position. Then put a record on the Platter lightly. In certain circumstances, 45 RPM adapter is needed;
2. Select the speed of record: 33 1/3, 45, 78rpm according to vinyl to play.
3. Remove the stylus guard and push the lift lever upward to raise the tone arm from the arm park, and then move the cartridge holder over the record gently, now the platter will run automatically (default set of Auto/Manual stop switch at ON position). Then put down the lever, the tone arm would drop and touch record surface gently. Now users can enjoy their favorite

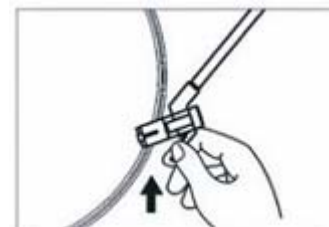

sons.

4. Select the auto/manual stop control: The turntable will stop automatically while the song on the record finished when the switch at ON position. The other side it will always play when it is at OFF position, this may helps to play some long recorded vinyl which can not be played to the end by normal way.
5. Rotate the volume control knob to get desired sound level. (**Note:** *make sure that your function switch placed in PHONO position, otherwise vol. button will not control the speaker volume.*)
6. Push the arm lift lever up to raise the arm, now platter will still running but play will pause. To continue the play, user just need to put down the lever.
7. **Record vinyl:** Firstly choose to insert memory device (USB drive or SD card). When turntable is working, simply press REC key and recording works will begin automatically. To finish the recording just need to press the STOP key.
8. If USB disk and SD card both plugged in, the turntable will be default to record on USB disk.

Note: *Recorded file in mp3 format with 128bit.*

USB/SD RECORDING AND PLAYING

PLAYING THE MUSIC FROM USB/SD DIRECTLY:

1. Be sure power is on, insert USB drive or Mp3 player into USB port and/or insert MEMORY CARD (SD/MMC) into SD socket.
2. Set the 4 stages function switch to **USB/SD** record position, press USB/SD control key to choose music source USB or SD.
3. The device supports for Mp3 and WMA formats. During play status, press PLAY/PAUSE button once to halt playing, press it again to continue.
4. Press PREV once to return to the start of the song track, or press twice to jump back to the previous track. Press NEXT once to fast forward, press NEXT twice to jump forward to the next track.
5. Press FOLDER+ key, the unit will search music files from first folder to the last one on memory devices, then press continually to recycle overview all folders.
6. Press STOP to end up the play.
7. Recorded files are saved into your USB disk or SD using MP3 format
8. Once you finished recording, you can upload your USB disk or SD to your computer to save on your computer or export into MP3 files as you like.

RECORD to USB/SD OPERATION MODE:



1. Select Audio source: PHONO or External audio source through AUX IN jack and play it on.
2. Insert USB drive and/or memory card. **Note:** The unit *supports USB flash disk (MAX 16GB) or SD card (MAX 4GB)*
3. Now press USB/SD key to choose USB DISK or SD, and then press REC once again, it will start to record now.
4. Press STOP key to end up the recording

Note:

The device also support for transit music files between SD and USB. Steps are similar to the above operations. This device supports for Mp3 and WMA formats playback.

AUX IN JACK



1. The external sound sourcing can be played and recorded through the device.
2. The external sound sourcing can be recorded to the USB disk or SD through the sockets.
3. Plug any audio source into the “AUX IN” jack in front of the control panel
4. Turn on the turntable by switching to “AUX IN” position
5. Once your audio input source is playing, the turntable is able to play back the audio source via “AUX IN” t his function as an extra pair of speakers for you
6. Turn the volume button to adjust the volume up/down

REPLACING STYLUS



1. push the arm loct to release the tone arm.



2. take off cap of the cartridge to expose the needle out.



1. separate the cartridge from the socket lightly
2. take off the audio-line from the cartridge completely



5. to fit a new cartridge just in opposite deals. Insert the audio-line accordingly, and install the cartridge to the socket lightly.

To buy the compatible stylus cartridge kit, please log on www.ultra-imagination.com to search the product (Distributor Based in Australia)

Or to send inquiry to support@ultra-imagination.com, please mention Promotion code: STYLUS15" in email to get 15% discount of the SRP price.

TIPS FOR BETTER PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, moving it either at the center or equally from both sides.
2. Do not touch the stylus tip with your fingers; avoid bumping the stylus on the turntable mat or a record's edge
3. Clean the stylus tip frequently, using a soft brush with a back-to-front motion only.
4. If you use a stylus cleaning fluid, use it very sparingly.
5. Wipe the dust cover and turntable housing gently with a soft cloth. Use only a

- small amount of mild detergent solution to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.
 7. Prior to moving the turntable, always unplug it from the AC outlet and fasten the tone arm on the tone arm rest with the vinyl twist-tie.

MAINTENANCE AND

CARE

Caring for the player

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The maximum ambient temperature: 35°C
- Electronic products of this kind should never be subjected to extreme temperatures or high humidity. For instance, this set should not be placed in bathing areas of around stoves and radiators.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

Inclination

- Do not install the unit in a inclined position, It is designed to be operated in a horizontal position only.

Condensation

- If the unit is brought directly from a cold to a warm location, moisture may condense inside the player, and cause damage it. When you first install the unit, or when you move it from a cold to a warm location, wait for 30 minutes before operating the unit.

Disconnect Power

- If you are not going to use the player for long time, be sure do disconnect the player from the AC power source.

PRODUCT FQA

1. Device is not power on



Make sure that your unit is connected to the power outlet and make sure that the power outlet main switch is on

2. No sound during vinyl playing or just very light sound

Make sure that you switch to PHONO mode when using the vol. control button to turn volume up/down

Under USB/SD mode, if you playing a vinyl record, the vol. button is not set to control the vinyl sound through the speaker, but to control the USB/SD' s music.

3. Can not read my USB disk or SD card

Make sure that your USB disk or SD card is good quality and the max support size for USB disk is 16GB, and SD card is only up to 4GB, NOT support 4GB SDHC and 8GB, 16GB. Make sure that your disk or card is not full and are not in lockable mode which prevent the overwrite on them

Make sure to push the SD card in the right way

4. Wobbling platter or distortion sound

Generally speaking, all turntables have min. wobbling due to the design, but the factory has adjust them to the reasonable level to prevent distortion

Make sure that your vinyl record is clean and no dust or crack

Slightly statics noise is consider normal and acceptable due to the aged record' s nature analogue characters

5. Contact details:

To purchase the extra stylus cartridge kit, please email support@ultra-imagination.com or speak to your reseller

Visit www.mbeat.com.au for more products

To register your product and receive direct warranty and support, please visit our Australian distributor' s website www.ultra-imagination.com go to product registration

WARRANTY **LIMIT**

Thank you for purchasing our products. Mbeat Australia warrants all its products against defect in material or workmanship for **12 months**, or under specified warranty terms depending on the product from the date of purchase. In the unlikely event that this product proves to be defective, please contact Mbeat Australia' s support department for troubleshooting, repair or replacement of your unit. Mbeat Australia, however, will not be able to issue a refund. All return requests must be accompanied with proof of original date of purchase.



When returning the product, please ship the product in its original packaging or packaging that gives an equal degree of protection. Include your proof of purchase in the packaging and the RMA number clearly marked on the outside of the package. Please include any of the accessories such as cables, power adapters, and CDs, when returning to Mbeat Australia. Please follow the RMA instructions given by our service support representatives. All returns must be shipped prepaid in both ways.

This warranty becomes invalid if the factory-supplied serial number or "warranty void" sticker has been removed or altered on the product. Warranty is valid only in the country of purchase. If you live outside of Australia, please contact your reseller for warranty service. Mbeat Australia will not process any warranty returns or repairs if the product is taken outside of Australia.

This Warranty does not cover: A) Cosmetic damage or damage due to acts of God. B) Accident, misuse, abuse, negligence or modification of any part of the product. C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Mbeat Australia. D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL MBEAT AUSTRALIA'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Mbeat Australia makes no warranty or representation, expressed, implied, or statutory, with respect to its products, contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose. Mbeat Australia reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity.

For further assistance please email our local Service and Support team at support@ultra-imagination.com